


AIR-CONDITIONER REMOTE CONTROLLER INSTRUCTIONS

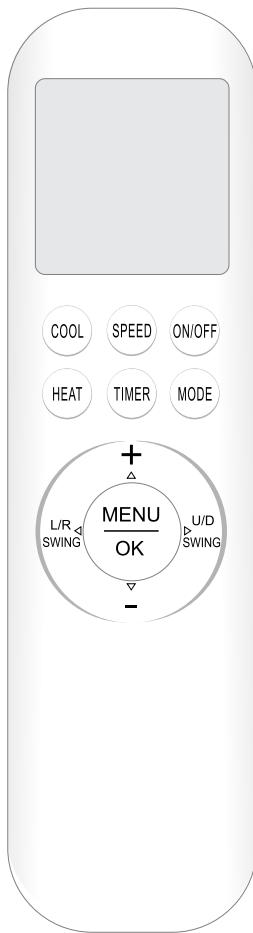

- Carefully read the instructions for safe and correct use of the air-conditioner.
- Carefully keep the instructions as it can be referred to at any time.

CONTENTS

Precautions -----	1
Buttons Description-----	2
Usage for Mode -----	8
Auto operation mode -----	8
Cool/Heat operation mode -----	8
Fan operation mode -----	8
Dry operation mode -----	9
Usage -----	9
Fix batteries -----	9


Precautions

- Before first time use of the remote controller, install the batteries and ensure the “+”and “-” poles are correctly positioned.
- Ensure the remote controller is pointed to the signal receiving window and that there is no obstruction between them, the distance is 8m at the maximum.
- Do not let the remote controller drop or fling it at will.
Do not let any liquid in the remote controller.
Do not expose the remote controller directly to the sunlight or excessive heat.
- If the remote controller does not function normally, remove the batteries for 30 seconds before reinstall them. If that doesn't work, replace the batteries.
- When replacing the batteries, do not mix the new batteries with old ones or mix batteries of different types, which could cause failure of the remote controller.
- If the remote controller is not to be used for a long period of time, remove the batteries first, lest the leakage from them may damage the remote controller.
- Properly dispose the discarded batteries.

Note:

1. This is an universal remote controller which provide all the function buttons. Please understand that some of the buttons may not function, depending on the specific air conditioner you have purchased. (If a specific function is not available on the air conditioner, pressing the corresponding button will simply have no respond.)
2. HEAT and ELE.H functions are not available for cool only models, thus these two buttons do not work correspondingly.

Buttons Description

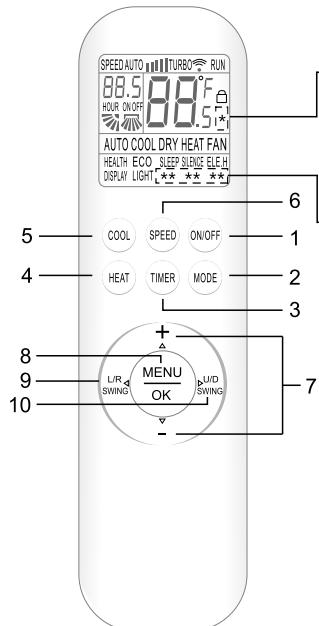

- Type: A shown as %

- Type: B shown as ⌂

- Type: A shown as COSY HUMI iCLEAN

- Type: B shown as i-FEEL Anti-F iCLEAN

Note:

1. There are two different display types of remote control (type A and type B) , whichever is the actual type.

2. The remote controller display all symbols during power-on, other time only display symbols corresponding to current operation.

1. ON/OFF Button

- * Press this button to turn on/off the unit.
- * This will clear the existing timer and sleep settings.

2. MODE Button

- * Press this button, you can select operation mode as follows:

AUTO → COOL → DRY → HEAT → FAN

Note: Heat mode is not available for cool only units.
Please read the Usage for Mode for a detailed description.

3. TIMER Button

- * With the unit on, press this button to set off timer or with it off to set on timer.
- * Press this button once, the "ON(OFF)" will flash. Press "+" or "-" to set the number of hours in which the unit will be turned on/off, with an interval of 0.5 hour, and a range of 0.5-24 hours.
- * Press it again to confirm the setting, the "ON (OFF)" will stop flashing.

Buttons Description

- * If the “TIMER” button is not pressed within 10 seconds after the “ON (OFF)” start flashing, the timer setting will be exited.
- * If a timer setting is confirmed, press this button again will cancel it.

4. HEAT Button


- * Press this button to enter “HEAT” mode.

5. COOL Button

- * Press this button to enter “COOL” mode.

6. SPEED Button

- * Press this button, you can select fan speed as follows:



Note: Auto air speed is not available in fan mode.

Turbo air speed is not available in auto mode.

This button is invalid in dry mode.

7. + & - Button

- * Each time the “+” is pressed, the temperature setting will increase by 1°C(1°F) and each time the “-” is pressed, it will decrease by 1°C(1°F).

- * The temperature setting range: 16°C (60°F) ~ 32°C(90°F).

Note: The temperature cannot be set in auto or fan mode.

8. MENU & OK Button

- * Press the “MENU” button to enter the function selection mode. Then press Δ , ∇ , \triangleleft and \triangleright to choose the function which you want. After, press the “OK” button, turn on this function.
- * In function selection mode, press Δ , ∇ , \triangleleft and \triangleright , the character in LCD will be flashing if the function can be selected.

9. L/R SWING Button

- * Press this button to activate left/right swing and press it again to turn off the swing function.

10. U/D SWING Button

- * Press this button to activate up/down swing and press it again to turn off the swing function.

Buttons Description

Note:

- * When the unit is on, press the “U/D SWING” button and hold for 3 seconds, the button will shift to be the functional button of “Rated swinging”, and then press the “U/D SWING” button to select the positions of Rated swinging.
- * Only by pressing the “U/D SWING” button again and hold for 3 seconds or reinstall the battery of the remote control, can the “U/D SWING” button resume its original function. The power on/off button of the remote control can not enable the exit of the “Rated swinging” function.

11. HEALTH

- * When the unit is on, press the “MENU” button ,then press Δ , ∇ , \triangleleft and \triangleright to choose “HEALTH” character, when the “HEALTH” character will blink, and press the “OK” button to highlight (not highlight) the “HEALTH” character, which will activate (deactivate) the health function.

12. ECO

- * In the cooling mode, the variable frequency air-conditioner will enter the ECO mode, which consumes the least electricity, and exit it automatically 8 hours after.
- * The ECO mode is not available on the fixed frequency air conditioner.
- * Changing modes or turning off the remote controller will automatically cancel the ECO function.
- * In the cooling mode, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “ECO”character, when the “ECO” character will blink, and press the “OK” button to highlight (not highlight) the “ECO” character , which will activate (deactivate) the ECO function.

Note: The electricity consumption is affected by the ambient temperature and the house structure etc., and when the ambient temperature is high or the house has a large area, be cautious to use the ECO mode.

13. SLEEP

- * When the unit is on, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “SLEEP” character, when the “SLEEP” character will blink, and press the “OK” button to highlight (not highlight) the “SLEEP” character , which will activate (deactivate) the function of sleep mode.

Buttons Description

- * The unit will exit SLEEP mode after 10 hours of continuous operation and restore to the previous status.

Note: The sleep function cannot be activated in fan or auto mode.

In the sleep mode, the screen of the air-conditioner is off.

14. SILENCE

- * When the unit is on, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “SILENCE” character, when the “SILENCE” character will blink, and press the “OK” button to highlight (not highlight) the “SILENCE” character , which will activate (deactivate) the function of silent wind.

15. ELE.H

- * When the unit is on, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “ELE.H” character, when the “ELE.H” character will blink, and press the “OK” button to highlight (not highlight) the “ELE.H” character , which will activate (deactivate) the function of auxiliary heating.
- * The unit will activate the auxiliary heating function automatically according to the ambient temperature, so as to accelerate the heating.
- * This button is disabled on some models.

16.DISPLAY

- * Press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “DISPLAY” character, when the character “DISPLAY” will blink, and press the “OK” button to activate (deactivate) the function of screen display.

17.LIGHT

- * The unit will activate or deactivate automatically the function of display on the air-conditioner screen according to the indoor ambient brightness.
- * When the unit is on, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “LIGHT” character, when the “LIGHT” character will blink, and press the “OK” button to highlight (not highlight) the character “LIGHT”, which will activate (deactivate) the function of light sensing.

Buttons Description

18. COSY (Only Type A)

- * When the air-conditioner is on under the modes of cooling, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “COSY” character ,when the “COSY” character will blink, and press the “OK”button to highlight (not highlight) the character “COSY”, which will activate (deactivate) the function of cleaning.
- * When the “COSY” function is on, the fan speed is auto and it will cancel the swinging funcution.
When the “COSY” function is on, these operations that turn off the unit, change the mode, and set SLEEP, fan speed, swinging function will automatically exit the"COSY" function, then restore to the previous status.

19.HUMI (Only Type A)

- * Press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “HUMI” character, when the “HUMI” character will blink, and press the “OK” button to highlight (not highlight) the “HUMI” character , which will activate(deactivate) the humidifying function.
- Note:** The humidifying function is not available under the dry mode.

20. iCLEAN

- * The unit will clean automatically the dusts on the evaporator and dry or blow-dry the moisture.
- * When the air-conditioner is off, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “iCLEAN” character , when the “iCLEAN” character will blink, and press the “OK” button to highlight (not highlight) the character “iCLEAN”, which will activate (deactivate) the function of cleaning.
- * The cleaning function will close automatically after 30 minutes.

21. Child-lock

- * Press the “HEAT” and “MODE” buttons at the same time and hold for at least 3 seconds to activate or deactivate the child-lock function.
- * When the child-lock function is activated, the remote control will indicate “”.

Buttons Description

22. Anti-F (Only Type B)

- * Anti-F function: When the unit is closed under the modes of cooling, dry or auto (cooling), it will continue to operate for about 3 minutes to dry the moisture on the evaporator, so as to prevent the accumulation of bacteria on the evaporator, which causes fungus and strange smell and is harmful to the health.
- * When the unit is off, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “Anti-F” character , when the “Anti-F” character will blink, and press the “OK” button to highlight (not highlight) the “Anti-F” character , which will activate (deactivate) the Anti-F function.

23. I-FEEL (Only Type B)

- * When the unit is on, press the “MENU” button, then press Δ , ∇ , \triangleleft and \triangleright to choose the “I-FEEL” character, when the “I-FEEL” character will blink, and press the “OK” button to highlight (not highlight) the “I-FEEL” and “ 匱 ” character , which will activate (deactivate) the I-FEEL function .

24. °C/°F

- * The temperature is displayed by default in Celsius.
- * Press the “COOL” and “HEAT” buttons at the same time above 3 seconds, you can set the “°C” or “°F”.

Note: Temperature display in Fahrenheit is not available for some models. When temperature is displayed in Fahrenheit on the remote controller, it might be in Celsius on the unit, the function and operation of which will not be affected.

25. 8°C heating function

- * 8°C heating function is only available for YKR-T/111E and YKR-T/121E remote control.
- * Only in the heating mode in the power-on state, press the “MODE” and “+” buttons at the same time above 3 seconds to turn on or off the 8°C heating function.
- * After turning on the 8°C heating function:
 - a. Press the “HEAT” button, or switch to mode, or select the sleep function, all can exit 8°C heating function.
 - b. Press the “SPEED”, “+”, “-” button is all non-effective.
 - c. Fahrenheit/Celsius switching function is non-effective.
 - d. Turn off and on the unit again, 8°C heating function is still retained.
 - e. Press the “MENU” button, ELE.H function is not selectable.

Usage for Mode

★ Auto operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select auto operation mode.
3. By pressing the “SPEED” button, you can select fan speed from Low, Mid, High, Auto.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the auto mode, the temperature settings is non-effective.

★ Cool/Heat operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select cool or heat operation mode.
3. By pressing the “+” or “-” button, you can set temperature from 16°C (60°F) to 32°C(90°F), the display changes as you press the button.
4. By pressing the “SPEED” button, you can select fan speed from Low, Mid, High, Turbo, Auto.
5. Press the “ON/OFF” button again, the air-conditioner stops.

Note: The cold wind type has no heating function.

★ Fan operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select fan operation mode.
3. By pressing the “SPEED” button, you can select fan speed from Low, Mid, High.
4. Press the “ON/OFF” button again, the air-conditioner stops.

Note: In the fan mode, the temperature settings is non-effective.


Usage for Mode

★ Dry operation mode

1. Press the “ON/OFF” button, the air-conditioner starts to operate.
2. Press the “MODE” button, select dry operation mode.
3. By pressing the “+” or “-” button, you can set temperature from 16°C (60°F) to 32°C(90°F), the display changes as you press the button.
4. Press the “ON/OFF” button again, the air-conditioner stops.
Note: In the dry mode, the speed settings is non-effective.

Usage


★ Fix batteries

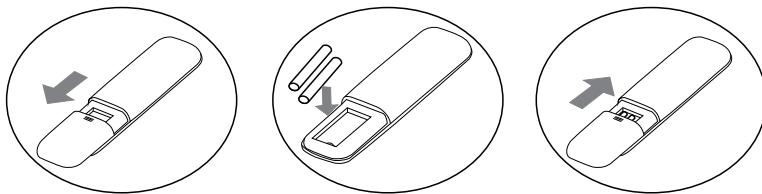

1. Slide to open the battery cover according to the direction indicated by the arrowhead.
2. Insert two brand new batteries (7#), and position the batteries to the right electric poles (+ & -).
3. Put back the battery cover.

DALJINSKI UPRAVLJAČ KLIMA UREĐAJA

UPUTE ZA UPORABU

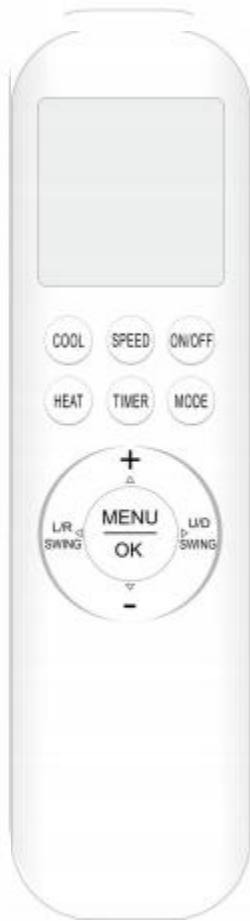

- Pažljivo pročitajte upute kako biste osigurali sigurnu i pravilnu uporabu klima uređaja.
- Sačuvajte ove upute radi buduće uporabe.

(SADRŽAJ)

Mjere opreza-----	1
Opis tipki-----	2
Načini rada-----	8
Automatski režim rada-----	8
Režim hlađenja/grijanja-----	8
Režim rada puhalna-----	8
Režim sušenja zraka-----	9
Uporaba-----	9
Ugradnja baterija-----	9


Mjere opreza

- Prijе prve upotrebe daljinskog upravljača, stavite baterije i provjerite jesu li "+" i "-" polovi pravilno postavljeni.
- Provjerite je li daljinski upravljač usmјeren prema prozorčiću za primanje signala i da između njih nema prepreka. Maksimalna udaljenost je 8 m.
- Nemojte dopustiti da vam daljinski upravljač padne niti ga nemojte namjerno bacati.
- Nemojte dozvoliti kontakt daljinskog upravljača s tekućinom.
- Ne izlažite daljinski upravljač direktnoj sunčevoj svjetlosti niti pretjeranoj toplini.
- Ako daljinski upravljač ne radi normalno, izvadite baterije na 30 sekundi te ih vratite u daljinski upravljač. Ako to ne riješi problem, zamijenite baterije.
- Prilikom zamjene baterija, nemojte miješati nove baterije sa starima ili miješati baterije različitih tipova, što može uzrokovati kvar daljinskog upravljača.
- Ako se daljinski upravljač neće koristiti dulje vrijeme, prvo izvadite baterije kako ne bi došlo do oštećenja daljinskog upravljača zbog curenja baterija.
- Propisno zbrinite potrošene baterije.

Napomena:

1. Ovo je univerzalni daljinski upravljač koji ima sve funkcijeske tipke. Imajte na umu da neke od tipki možda neće raditi, ovisno o konkretnom klima uređaju koji ste kupili. (Ako određena funkcija nije dostupna na klima uređaju, pritiskom na odgovarajuću tipku jednostavno neće biti odgovora.)
2. Funkcije HEAT i ELE.H nisu dostupne za modele koji omogućuju samo hlađenje, stoga ove dvije tipke neće možda raditi na odgovarajući način.

Opis tipki

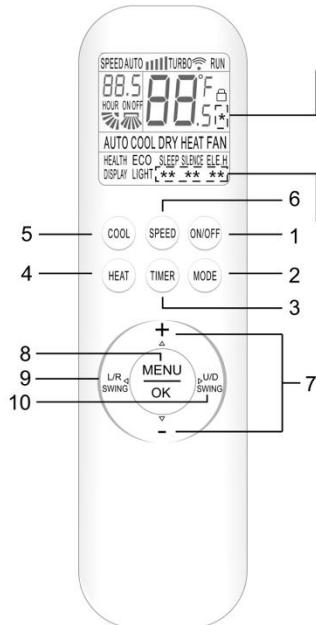

- **Tip: A**
prikazuje se kao %
- **Tip: B**
prikazuje se kao ☰

- **Tip: A**
prikazuje se kao COSY HUMI iCLEAN
- **Tip: B**
prikazuje se kao i-FEEL Anti-P
iCLEAN

Napomena:

1. Postoje dva različita tipa zaslona daljinskog upravljača (tip A i tip B).
2. Zaslon daljinskog upravljača prikazuje sve simbole samo prilikom uključivanja, a tijekom rada prikazuje samo simbole koji se odnose na trenutačni način rada.

1. ON/OFF tipka

- * Pritisnite ovu tipku za uključivanje/isključivanje klima uređaja.
- * To će resetirati postojeći tajmer i postavke spavanja.

2. Tipka MODE

- * Pritisnite ovu tipku za odabir načina rada kako slijedi:

→AUTO→COOL→DRY→HEAT→FAN→

Napomena: Režim grijanja (HEAT) nije dostupan kod jedinica koje omogućuju samo hlađenje. Za detaljan opis pogledajte odlomak Načini rada.

3. TIMER tipka

- * S uključenim klima uređajem, pritisnite ovu tipku za postavljanje vremena isključivanja, a s isključenim klima uređajem, za postavljanje vremena uključivanja.

* Jednim pritiskom na tipku trepće "ON(OFF)". Pritisnite "+" ili "-" za postavljanje broja sati nakon kojih će se uređaj uključiti/isključiti, uz interval od 0,5 sati i raspon od 0,5 do 24 sata.

- * Ponovo pritisnite tipku za potvrdu postavke i "ON(OFF)" će prestati treptati.

Opis tipki

* Ako se tipka "TIMER" ne pritisne unutar 10 sekundi nakon što počne treptati "ON (OFF)", daljinski upravljač će izaći iz postavki tajmera.

* Ako je postavka tajmera potvrđena, ponovnim pritiskom ove tipke postavka će biti poništena.

4. HEAT tipka


* Pritisnite ovu tipku za ulazak u "HEAT" način rada.

5. COOL tipka

* Pritisnite ovu tipku za ulazak u "COOL" način rada.

6. SPEED tipka

* Pritiskom na ovu tipku možete odabrati brzinu puhalo kako slijedi:



Napomena: Automatska regulacija brzine puhalo nije dostupna u načinu rada s puhanjem. Turbo brzina puhanja nije dostupna u automatskom načinu rada. Ova tipka ne djeluje tijekom sušenja zraka.

7. + & - tipka

* Sa svakim pritiskom tipke "+", postavljena temperatura se poveća za 1°C(1°F), sa svakim pritiskom tipke "-", postavljena temperatura se smanji za 1°C(1°F).

* Raspon postavljanja temperature: 16°C (60°F) - 32°C(90°F).

Napomena: Temperatura se ne može postaviti u automatskom načinu rada ili načinu rada s puhanjem.

8. MENU & OK tipka

* Pritisnite tipku "MENU" za ulazak u režim odabira funkcije. Nakon toga pritisnite Δ , ∇ , \triangleleft i \triangleright za odabir funkcije koju želite. Nakon odabira, pritisnite "OK" tipku, za aktiviranje odabrane funkcije.

* U režimu odabira funkcije, pritiskom na Δ , ∇ , \triangleleft i \triangleright , odgovarajući znak na zaslonu će treptati ako se funkcija može odabrati.

9. L/R SWING tipka

* Pritisnite ovu tipku za aktiviranje lijevog/desnog pomicanja zaklopke, te je ponovo pritisnite za isključivanje ove funkcije.

10. U/D SWING tipka

* Pritisnite ovu tipku za aktiviranje gore/dolje pomicanja zaklopke, te je ponovo pritisnite za isključivanje ove funkcije.

Opis tipki

Napomena:

- * Kada je jedinica uključena, pritisnite tipku "U/D SWING" i držite je 3 sekunde i tipka će postati funkcija tipka za "zakretanje zaklopke u koracima", te pritisnite tipku "U/D SWING" za odabir željenog položaja zaklopke.
- * Samo ponovnim pritiskom tipke "U/D SWING" i držanjem iste 3 sekunde, te ponovnim stavljanjem baterija u daljinski upravljač, može se tipka "U/D SWING" vratiti u originalno stanje. ON/OFF tipka daljinskog upravljača ne može uzrokovati izlazak iz funkcije "zakretanja zaklopke u koracima".

11. HEALTH

- * Kada je jedinica uključena, pritisnite tipku "MENU", te pritisnite tipke Δ , ∇ , \triangleleft i \triangleright za odabir simbola "HEALTH", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "HEALTH", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju zdravlja.

12. ECO

- * Tijekom hlađenja, klima uređaj promjenjive frekvencije će ući u ECO režim rada, koji troši najmanje električne energije, te će iz njega automatski izaći nakon 8 sati.
- * ECO režim rada nije dostupan na klima uređajima s fiksnom frekvencijom.
- * Promjena načina rada ili isključivanje daljinskog upravljača će automatski prekinuti ECO funkciju.
- * Tijekom hlađenja, pritisnite tipku "MENU", te pritisnite tipke Δ , ∇ , \triangleleft i \triangleright za odabir simbola "ECO", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "ECO", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) ECO funkciju.

Napomena: Na potrošnju električne energije utječe okolna temperatura, struktura kuće, itd., i kada je okolna temperatura visoka ili kuća ima veliku površinu, oprezno koristite ECO način rada.

13 SLEEP

- * Kada je jedinica uključena, pritisnite tipku "MENU", te pritisnite tipke Δ , ∇ , \triangleleft i \triangleright za odabir simbola "SLEEP", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "SLEEP", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju spavanja.

Opis tipki

* Jedinica će izaći iz SLEEP načina rada nakon 10 sati kontinuiranog rada i vratiti se u prethodni status.

Napomena: Funkcija spavanja ne može se aktivirati u načinu rada s puhanjem ili automatskom načinu rada.

U režimu spavanja, zaslon klima uređaja je isključen.

14. SILENCE

* Kada je jedinica uključena, pritisnite tipku "MENU", te pritisnite tipke Δ , ∇ , \triangleleft i \triangleright za odabir simbola "SILENCE", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "SILENCE", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju tihog puhanja.

15. ELE.H

* Kada je jedinica uključena, pritisnite tipku "MENU", te pritisnite tipke Δ , ∇ , \triangleleft i \triangleright za odabir simbola "ELE.H", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "ELE.H", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju pomoćnog grijanja.

* Jedinica će automatski aktivirati funkciju pomoćnog grijanja prema okolnoj temperaturi, kako bi se grijanje ubrzalo.

* Na nekim modelima ova tipka je onemogućena.

16. DISPLAY

* Pritisnite tipku "MENU", te pritisnite tipke Δ , ∇ , \triangleleft i \triangleright za odabir simbola "DISPLAY", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "DISPLAY", što će aktivirati (ako je bio isključen) i deaktivirati (ako je bila uključen) zaslon.

17. LIGHT

* Jedinica će automatski aktivirati ili deaktivirati prikaz na zaslonu klima uređaja ovisno o intenzitetu unutarnje svjetline.

* Kada je jedinica uključena, pritisnite tipku "MENU", te pritisnite tipke Δ , ∇ , \triangleleft i \triangleright za odabir simbola "LIGHT", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "LIGHT", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju senzora svjetline.

Opis tipki

18. COSY (samo tip A)

* Kada je klima uređaj uključen u režimu hlađenja, pritisnite tipku "MENU", te pritisnite tipke \triangle , ∇ , \leftarrow i \rightarrow za odabir simbola "COSY", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "COSY", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju čišćenja.

* Kada je funkcija "COSY" aktivirana, brzina puhanja se regulira automatski i funkcija pomicanja zaklopke je deaktivirana. Kada je funkcija "COSY" aktivirana, operacije koje isključuju jedinicu, mijenjaju režim rada i postavljaju SLEEP funkciju, brzinu puhalja, funkciju pomicanja zaklopke automatski će deaktivirati funkciju "COSY", te se jedinica vraća u prethodno stanje.

19. HUMI (samo tip A)

* Pritisnite tipku "MENU", te pritisnite tipke \triangle , ∇ , \leftarrow i \rightarrow za odabir simbola "HUMI", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "HUMI", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju vlaženja.

Napomena: Funkcija vlaženja nije dostupna u režimu sušenja zraka.

20. iCLEAN

* Jedinica će automatski očistiti prašinu s isparivača i osušiti ili puhanjem osušiti vlagu.

* Kada je klima uređaj isključen, pritisnite tipku "MENU", te pritisnite tipke \triangle , ∇ , \leftarrow i \rightarrow za odabir simbola "iCLEAN", koji će treptati, te pritisnite tipku "OK" za označavanje simbola "iCLEAN", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) funkciju čišćenja.

* Funkcija čišćenja će se automatski deaktivirati nakon 30 minuta.

21. Zaštita za djecu

* Istovremeno pritisnite tipke "HEAT" i "MODE" i držite ih pritisнуте 3 sekunde kako biste aktivirali ili deaktivirali funkciju zaštite za djecu.

* Kada je funkcija zaštite za djecu aktivirana, na daljinskom upravljaču se prikazuje "□".

Opis tipki

22. Anti-F (samo tip B)

* Anti-F funkcija: Nakon što se jedinica isključi u režimima hlađenja, sušenja zraka ili automatskog načina rada (hlađenje), nastavit će raditi oko 3 minute kako bi se osušila vлага u isparivaču, kako bi se sprječila akumulacija bakterija u isparivaču, što uzrokuje pojavu gljivica i neugodnih mirisa, te je štetno za zdravlje.

* Kada je klima uređaj isključen, pritisnite tipku "MENU", te pritisnите tipke Δ , ∇ , \leftarrow i \rightarrow za odabir simbola "Anti-F", koji će treptati, te pritisnите tipku "OK" za označavanje simbola "Anti-F", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) Anti-F funkciju.

23. I-FEEL (samo tip B)

* Kada je klima uređaj uključen, pritisnite tipku "MENU", te pritisnите tipke Δ , ∇ , \leftarrow i \rightarrow za odabir simbola "I-FEEL", koji će treptati, te pritisnите tipku "OK" za označavanje simbola "I-FEEL", što će aktivirati (ako je bila isključena) i deaktivirati (ako je bila uključena) I-FEEL funkciju

24. °C/°F

* Temperatura se standardno prikazuje u stupnjevima Celzijusa.

* Istovremeno pritisnite tipke "COOL" i "HEAT" na 3 sekunde za odabir mjerne jedinice "°C" ili "°F".

Napomena: Za neke modele prikaz temperature u stupnjevima Fahrenheita nije dostupan. Kada se na daljinskom upravljaču temperatura prikazuje u stupnjevima Fahrenheita, može se prikazivati u stupnjevima Celzijusa na jedinici, što neće utjecati na funkciju i rad jedinice.

25. 8°C funkcija grijanja

* 8°C funkcija grijanja dostupna je samo za modele daljinskih upravljača YKR-T/111E i YKR-T/121E.

* Kada je jedinica uključena i u režimu grijanja, istovremeno pritisnite tipke "MODE" i "+" dulje od 3 sekunde kako biste uključili ili isključili 8°C funkciju grijanja.

* Nakon uključivanja 8°C funkcije grijanja:

- Za izlazak iz 8°C funkcije grijanja, pritisnite tipku "HEAT", ili se prebacite u drugi način rada ili odaberite funkciju spavanja.
- Pritisak na tipku "SPEED" ili "+" nema nikakvog utjecaja.
- Odabir stupnjeva Fahrenheita/Celzijusa nema nikakav utjecaj.
- Nakon isključivanja i ponovnog uključivanja jedinice, 8°C funkcija grijanja ostaje aktivna.
- Pritiskom na tipku "MENU", nije moguće odabrati funkciju ELE.H.

Načini rada

★ Automatski režim rada

1. Pritisnite "ON/OFF" tipku kako biste uključili klima uređaj.
2. Pritisnite tipku "MODE" i odaberite automatski način rada.
3. Pritiskom tipke "SPEED" možete odabratи brzinu puhala Low (niska), Mid (srednja), High (visoka), Auto.
4. Ponovnim pritiskom "ON/OFF" tipke, klima uređaj će se isključiti.

Napomena: U automatskom načinu rada, podešavanje temperature nema utjecaja.

★ Režim hlađenja/grijanja

1. Pritisnite "ON/OFF" tipku kako biste uključili klima uređaj.
2. Pritisnite tipku "MODE" i odaberite režim hlađenja ili grijanja.
3. Pritiskom tipke " + " ili " - ", možete postaviti temperaturu od 16°C (60°F) do 32°C (90°F). Prikaz na zaslonu se mijenja pritiskom na tipku.
4. Pritiskom tipke "SPEED" možete odabratи brzinu puhala Low (niska), Mid (srednja), High (visoka), Turbo i Auto.
5. Ponovnim pritiskom "ON/OFF" tipke, klima uređaj će se isključiti.

Napomena: Model s hladnim puhanjem nema funkciju grijanja.

★ Režim rada puhala

1. Pritisnite "ON/OFF" tipku kako biste uključili klima uređaj.
2. Pritisnite tipku "MODE" i odaberite režim rada s puhanjem.
3. Pritiskom tipke "SPEED" možete odabratи brzinu puhala Low (niska), Mid (srednja) i High (visoka).
4. Ponovnim pritiskom "ON/OFF" tipke, klima uređaj će se isključiti.

Napomena: U načinu rada s puhanjem, podešavanje temperature nema utjecaja.


Načini rada

★ Režim sušenja zraka

1. Pritisnite "ON/OFF" tipku kako biste uključili klima uređaj.
2. Pritisnite tipku "MODE" i odaberite režim sušenja zraka.
3. Pritiskom tipke "+" ili "-", možete postaviti temperaturu od 16°C (60°F) do 32°C (90°F). Prikaz na zaslonu se mijenja pritiskom na tipku.
4. Ponovnim pritiskom "ON/OFF" tipke, klima uređaj će se isključiti.
Napomena: U režimu sušenja zraka, podešavanje brzine puhanja nema utjecaja.

Uporaba

★ Ugradnja baterija

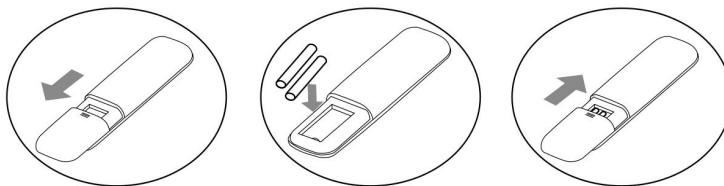

1. Povlačenjem otvorite pokrov odjeljka za baterije u smjeru prikazanom strelicom.
2. Stavite dvije nove baterije (7#), pazeći na orientaciju električnih polova (+&-).
3. Vratite pokrov odjeljka za baterije.